Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

MOTOROLA

Embedded SDK (Software Development Kit)

DSP56800/MSCAN Driver User's Manual

SDK116/D
Rev. 2, 07/22/2002

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

© Motorola, Inc., 2002. All rights reserved.

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Contents

About This Document

Audience ix
Organization ix
Suggested Reading ix
Conventions x
Definitions, Acronyms, and Abbreviations x
References xi

Chapter 1
Overview

1.1 Introduction 1-1
1.1.1 Driver Features 1-1
1.2 CAN Overview 1-1
1.3 MSCAN Overview 1-3
1.3.1 Message Transmission 1-4
1.3.2 Message Receiving 1-4
1.4 MSCAN Driver Overview 1-5

Chapter 2
MSCAN Driver Description

2.1 MSCAN Driver Functionality Overview 2-1
2.2 MSCAN Driver Static Configuration 2-2
2.3 Application Static Configuration 2-3
2.3.1 CAN_MAX_RECEIVE_ID 2-3
2.3.2 CAN_MAX_TRANSMIT_ID 2-3
2.3.3 CAN_SPEED 2-3
2.3.4 CAN_TIME_SEGMENT1 2-4
2.3.5 CAN_TIME_SEGMENT2 2-4
2.3.6 CAN_PRESCALER 2-4
2.3.7 CAN_SAMPLING 2-4
2.3.8 CAN_SYNCH_JUMP_WIDTH 2-4
2.3.9 CAN_STOP_IN_WAIT_MODE 2-5
2.3.10 CAN_LOOP_BACK 2-5
2.3.11 CAN_WAKE_UP_MODE 2-5
2.3.12 CAN_CLOCK_SOURCE 2-5
2.3.13 CAN_CUSTOM_FILTER_CODE 2-5
2.3.14 CAN_CUSTOM_FILTER_MASK 2-6
2.3.15 CAN_RECEIVE_ID_QUEUE_SIZE 2-6
2.3.16 CAN_RAW_CALLBACK 2-6

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

2.4 Low-Power Modes 2-7
2.5 MSCAN Driver Files 2-8
2.6 Application Files 2-9
2.7 Application Data Types 2-10
2.7.1 can_sOpenParams 2-10
2.7.2 can_eFormat 2-10
2.7.3 can_eScheduleType 2-10
2.7.4 can_sData 2-11
2.8 Driver Memory Requirements 2-11
2.8.1 MSCAN Driver Code 2-11
2.8.1.1 Unqueued Transmission Mode, 11-bit Standard Addressing Type: 2-11
2.8.1.2 Unqueued Transmission Mode, 29-bit Extended Addressing Type: 2-11
2.8.1.3 Queued Transmission Mode, 11-bit Standard Addressing Type: 2-12
2.8.1.4 Queued Transmission Mode, 29-bit Extended Addressing Type: 2-12
2.8.2 MSCAN Driver Simple Application Code 2-12

Chapter 3
API Functional Description

3.1 Overview 3-1
3.1.1 Error Codes 3-1
3.2 open API statement 3-1
3.2.1 Prototype 3-1
3.2.2 Arguments Description 3-2
3.2.3 Return Values and Error Codes 3-2
3.2.4 Functionality Description 3-2
3.2.5 Example 3-3
3.3 close API statement 3-4
3.3.1 Prototype 3-4
3.3.2 Arguments Description 3-4
3.3.3 Return Values and Error Codes 3-4
3.3.4 Functionality Description 3-4
3.4 read API statement 3-4
3.4.1 Prototype 3-4
3.4.2 Arguments Description 3-4
3.4.3 Return Values and Error Codes 3-5
3.4.4 Functionality Description 3-5
3.4.5 Example 3-5
3.5 write API statement 3-6
3.5.1 Prototype 3-6
3.5.2 Arguments Description 3-6
3.5.3 Return Values and Error Codes 3-6
3.5.4 Functionality Description 3-7
3.5.5 Example 3-7
3.6 ioctl API statement 3-8
3.6.1 Prototype 3-8
3.6.2 Arguments Description 3-8
3.6.3 Return Values and Error Codes 3-8

For More Information On This Product,
Go to: www.freescale.com

3.6.4 Functionality Description 3-9
3.6.5 Example 3-10

Chapter 4
License

4.1 Limited Use License Agreement 4-1

Appendix A
Demo Application

A.1 CAN Test Application A-1
A.2 CAN Bus Installation A-1
A.3 Demo Overview A-2
A.4 DSP5680x Demo Description. A-2
A.5 PC Demo Description A-3

Appendix B
DSP56800/MSCAN Hardware Notes

B.1 Allowed Time Segments Settings. B-1

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

List of Tables

Table 3-1 Error Codes 3-1
Table 3-2 open Statement Parameters 3-2
Table 3-3 close Statement Parameters 3-4
Table 3-4 Read Statement Parameters 3-5
Table 3-5 write Statement Parameters 3-6
Table 3-6 ioctl Statement Parameters 3-8
Table 3-7 MSCAN Status Flags 3-9
Table 3-8 Message Buffer Status Values 3-10
Table A-1 Pin Descriptions A-2
Table B-1 DSP56800/MSCAN Related Parameters to Assign CAN Speed Manually B-1
Table B-2 Allowed DSP56800 CAN Speed Related Parameters B-2

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

List of Figures

Figure 1-1 MSCAN Message Buffers Organization 1-4
Figure A-1 CAN Bus. A-1
Figure A-2 Demo Application Main Dialog Window. A-3

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

About This Document

This manual describes the DSP56800/MSCAN Driver application for use with the Embedded Software Development Kit, (SDK).

Audience

This manual targets software developers implementing Controller Area Network protocol driver routines within software applications.

Organization

This User's Manual consists of the following sections:

- **Chapter 1, Overview** describes general features of the Controller Area Network (CAN), the Motorola Scalable Controller Area Network (MSCAN), and the MSCAN driver.
- **Chapter 2, MSCAN Driver Description** describes MSCAN driver functionality as well as the MSCAN driver and driver application configuration in the framework of the Motorola Embedded SDK.
- **Chapter 3, API Functional Description** describes MSCAN driver API statements.
- **Chapter 4, License** provides the license required to use this product
- **Appendix A Demo Application** contains the description of the Demo application provided with the MSCAN Driver to demonstrate its operation.
- **Appendix B DSP56800/MSCAN Hardware Notes** describes settings and parameters for the MSCAN.

Suggested Reading

We recommend that you have a copy of the following references:

- *DSP56800 Family Manual*, DSP56800FM/AD
- *DSP56824 User's Manual*, DSP56824UM/AD
- *Inside CodeWarrior: Core Tools*, Metrowerks Corp.

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Conventions

This document uses the following notational conventions:

Typeface, Symbol or Term	Meaning	Examples
`Courier Monospaced Type`	Code examples	`//Process command for line flash`
Italic	Directory names, project names, calls, functions, statements, procedures, routines, arguments, file names, applications, variables, directives, code snippets in text	...and contains these core directories: *applications* contains applications software... ...CodeWarrior project, *3des.mcp* is... ...the *pConfig* argument.... ...defined in the C header file, *aec.h*....
Bold	Reference sources, paths, emphasis	...refer to the **Targeting DSP56F80x Platform** manual.... ...see: **C:\Program Files\Motorola\Embedded SDK\help\tutorials**
Blue Text	Linkable on-line	...refer to Chapter 7, License....
Number	Any number is considered a positive value, unless preceded by a minus symbol to signify a negative value	3V -10 DES^{-1}
ALL CAPITAL LETTERS	# defines/ defined constants	# define INCLUDE_STACK_CHECK
Brackets [...]	Function keys	...by pressing function key [F7]
Quotation marks, "..."	Returned messages	...the message, "Test Passed" is displayed.... ...if unsuccessful for any reason, it will return "NULL"...

Definitions, Acronyms, and Abbreviations

The following list defines the acronyms and abbreviations used in this document. As this template develops, this list will be generated from the document. As we develop more group resources, these acronyms will be easily defined from a common acronym dictionary. Please note that while the acronyms are in solid caps, terms in the definition should be initial capped ONLY IF they are trademarked names or proper nouns.

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

API	Application Program Interface
CAN	Controller Area Network
CAN ID	CAN Identifier
DLC	Data Length Code
DSP	Digital Signal Processor or Digital Signal Processing
IDE	Identifier Extension
ISR	Interrupt Service Routine
MCU	MicroController Unit
MSCAN	Motorola Scalable Controller Area Network
RAM	Random Access (read/write) Memory
ROM	Read Only Memory
RTR	Remote Transmission Request
SDK	Software Development Kit
SRR	Substitute Remote Request

References

The following sources were used to produce this book:

1. *DSP56800 Family Manual, DSP56800FM/D*
2. *DSP56824 User's Manual, DSP56824UM/D*
3. *DSP56F80x User's Manual, DSP56F801_7UM/D*
4. *CAN Specifications, Version 2.0, Phillips Semiconductors, 1991*
5. *Embedded SDK Programmer's Guide*

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Chapter 1
Overview

1.1 Introduction

The Motorola Scalable Controller Area Network, (MSCAN), driver described in this manual is provided as a part of Motorola's Embedded Software Development Kit (SDK) package for DSP56803/05 and is intended to be used within this package.

This document describes Controller Area Network, (CAN), protocol driver routines for the Motorola DSP56803/05 MSCAN modules. The Driver Application Programming Interface, (API), is a set of high-level functions accessed via the standard SDK API.

The DSP56800/MSCAN Driver is provided in source code and a demo application to present the use of driver routines. The Metrowerks' C compiler is used as a target compiler.

Please refer to the standard Software License Agreement in **Chapter 4** for license terms and conditions; please consult with your Motorola representative for premium product licensing.

1.1.1 Driver Features

- Configurable initial settings for MSCAN registers
- Configurable number of message buffers for both send and receive
- Time scheduled and priority scheduled message transmission
- Configurable synchronous and asynchronous operating mode
- Configurable received messages queue for every receiving buffer
- Possibility to specify user's call back function for receiving, to speed up/customize the ReceiveISR
- The driver automatically assigns Acceptance Filters
- Sleep and Wake-up functions
- Static driver configuration can set either CAN2.0A or CAN2.0B addressing modes
- Static driver configuration can set either queued or unqueued message transmission types

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

1.2 CAN Overview

The CAN was originally developed by BOSCH Gmbh as a serial communications protocol to pass information between controllers on an automotive network and thus reduce the growing complexity of the wiring harness in modern car design. The benefits of the CAN protocol are applicable to other cost-sensitive and environmentally demanding applications in the industrial sector. The low cost of CAN networks is realized by high-performance microcontrollers with on-chip CAN modules.

The driver routines described in this User Manual are designed to facilitate the use of Motorola DSP56803/05 on-chip MSCAN modules Because the application programmer does not need an understanding of the modules' detailed operation to develop effective applications. However, a basic understanding of the CAN protocol is assumed and a very brief overview is provided here.

CAN is a Carrier Sense Multiple Access with Collision Detection, (CSMA/CD), protocol. Information is transmitted on the CAN bus in fixed format messages by nodes. The main message formats are called:

- Data Frame, used to transmit data and consisting of:
  - Start bit
  - Arbitration field
  - Control field
  - Data field
  - Cyclic Redundancy (CRC) Field
  - Acknowledge field
  - End-of-frame field
- Remote Transmission Request Frame (Remote Frame), a request for data
- Error Frame, transmitted automatically by the MSCAN module when an error is detected

A Remote Frame is similar to a Data Frame but has no data field. To transmit a Data Frame, the application must specify the arbitration field, a part of the control field, (Data Length Code, from 0 to 8) and the data field, (number of bytes specified by Data Length Code); the other fields are generated automatically by the CAN controller.

The arbitration field contains the message Identifier, which has three functions:

1. It defines the priority of the message. CAN is a multi-master protocol; when more than one node is attempting to start the transmission of Data or Remote Frames simultaneously, the bus access conflict is resolved by bit-wise arbitration, using the arbitration field of the message. The message with the highest priority arbitration field wins access to the CAN bus and may continue to transmit the rest of the message. This requires that each message in a system is defined with a unique Identifier.
2. It labels the message. As each message must have a unique Identifier, the Identifier may be used to label the message contents. For example, the message with Identifier 0x123 always contains the latest value from sensor A.
3. It filters messages. All nodes test the arbitration field of all received messages with a programmable hardware filter to determine whether to accept the message. Messages which are not relevant to a node can thus be filtered out. An efficient filter implementation will save processor time by eliminating the processing of unwanted messages. To achieve efficient filters on all nodes, select Identifiers carefully. Filtering allows any number of nodes to receive and simultaneously act upon the same message, providing multicast communication.

For More Information On This Product,
Go to: www.freescale.com

ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

CAN specification 2.0A defines an 11-bit Identifier; CAN specification 2.0B defines Identifiers with 11 bits (Standard) and 29 bits (Extended).

1.3 MSCAN Overview

The MSCAN modules are Motorola-specific implementations of CAN controllers for the CAN 2.0B protocol. These are highly efficient CAN controller modules, optimized for real-time performance, that incorporate important features for predictable CAN network traffic.

The basic features of the MSCAN are:

- Modular architecture
- Implementation of the CAN protocol - Version 2.0A/B
  - — Standard and extended data frames
  - — 0 - 8 bytes data length
  - — Programmable bit rate up to 1 Mbps[1]
  - — Support for remote frames
- Double-buffered receive storage scheme
- Triple-buffered transmit storage scheme with internal prioritization using a “local priority” concept
- Flexible maskable Identifier filter supports two full-size extended Identifier filters (two 32-bit), four 16-bit filters, or eight 8-bit filters
- Programmable wake-up functionality with integrated low-pass filter
- Programmable loopback mode supports self-test operation
- Separate signalling and interrupt capabilities for all CAN receiver and transmitter error states (Warning, Error Passive, Bus-Off)
- Programmable MSCAN clock source (either IP Bus clock or crystal oscillator output)
- Three low power modes:
  - — SLEEP
  - — Soft RESET
  - — Power Down

The three transmit message buffers and one double-buffered receive message buffer of MSCAN are organized as shown in **Figure 1-1**.

1. Depending on the actual bit timing and the clock jitter of the PLL.

For More Information On This Product,
Go to: www.freescale.com
Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

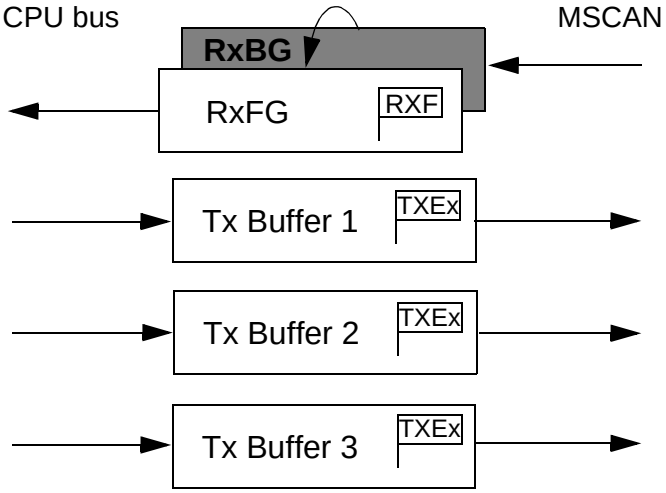

Figure 1-1. MSCAN Message Buffers Organization

1.3.1 Message Transmission

All three transmit buffers have 13-byte data structure.

To transmit a message, the available MSCAN transmit buffer shall be identified, which is indicated by a set Transmit Buffer Empty (TXEx) flag. If the Tx Buffer is available, the Identifier, control bits and data contents are then stored in one of the transmit buffers, and the buffer is flagged as ready for transmission by clearing the associated TXEx flag. The MSCAN then schedules the message for transmission and signals the successful transmission of the buffer by setting the associated TXEx flag. If not masked, the send ISR is generated when TXEx is set and is used by the driver to re-load the buffer.

In case more than one buffer is scheduled for transmission when the CAN bus becomes available for arbitration, the MSCAN uses the local priority setting for the three buffers to determine the transmission order. The local priority reflects the priority of this particular message relative to the set of messages being transmitted from this node. The lowest binary priority value is defined to be the highest priority.

1.3.2 Message Receiving

The received messages are stored in a two-stage input FIFO. The two message buffers are alternatively mapped into a single memory area. While the background buffer (RxBG) is exclusively associated with the MSCAN, the foreground buffer (RxFG) is addressable by the CPU.

The Receiver Full flag (RXF) signals the status of the foreground receive buffer. When the buffer contains a correctly-received message with the matching Identifier, this flag is set.

For More Information On This Product,
Go to: www.freescale.com

ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

On reception, each message is checked to see if it passes the filter and is written in parallel into RxBG. The MSCAN copies the content of the RxBG into RxFG (if the RXF flag is not set), sets the RXF flag, and emits the receive ISR. When the received message is read from the RxFG, the RXF flag is reset to acknowledge the interrupt and to release the foreground buffer. A new message can be immediately received into RxBG.

The overrun condition occurs when both the foreground and the background receive message buffers are filled with correctly-received messages with accepted Identifiers and another message with an accepted Identifier is correctly received from the bus.

1.4 MSCAN Driver Overview

The MSCAN driver software described in this manual is designed specifically for use with the DSP56803/05 MSCAN modules, and is integrated with the Motorola Embedded SDK package for DSP568xx.

The MSCAN driver software manages the transmission and reception data through the CAN bus by the MSCAN modules.

The user application accesses the driver routines via the Motorola Embedded SDK API, which provides common interface for input/output operations.

From the application point of view, the driver provides “pipe” functionality, where unidirectional virtual pipe connects two (or more in multicast mode) virtual devices on different DSP units. Each pipe corresponds to a particular CAN Identifier and provides data transfer by portions up to 8 bytes.

The run-time driver API is based on a device descriptor approach recommended by POSIX standard. To set up a virtual device, *open* and *close* statements are used. Transmission and reception application datais provided by *read* and *write* API statements. The *ioctl* API statement initializes the MSCAN module, puts the MSCAN module into low-power SLEEP mode, wake-ups from SLEEP mode and obtains the status of MSCAN device and descriptor.

The static configuration API provides CAN time settings and two major driver configurations:

- CAN 2.0A or CAN 2.0B protocol (11-bit or 29-bit CAN ID)
- Queued or unqueued version

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Chapter 2
MSCAN Driver Description

2.1 MSCAN Driver Functionality Overview

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

The DSP56803/05 MSCAN Driver routines are designed to provide the application programmer with a friendly, high-level communication interface to the MSCAN module, allowing the programmer to develop effective applications without an understanding of the detailed operation of the MSCAN module. The application programmer can design the application using MSCAN driver routines, knowing that the driver routines will take all necessary actions to transmit and receive the messages on the CAN bus.

However, additional possibilities are provided for sophisticated users familiar with CAN, who want to control the device. The CAN may be controlled by accessing the MSCAN registers; i.e., setting customized values for MSCAN Time Control Registers, or by configuring acceptance filtering.

The application programmer creates generic message buffers which can be opened either for reading or writing. While opening the message buffer, its features are specified as input parameters of the *open* API statement. These features include options such as CAN Identifier, the message data format, synchronization mode, and transmission type (time-scheduled or priority-scheduled). Every open read or write message buffer can later be multiply accessed via a corresponding *read* or *write* statement to receive and transmit messages and by an *ioctl* statement to receive the status of the buffer. To close communication via the specified message buffer, a *close* statement is used.

The developer can use the *ioctl* API statement to control the MSCAN device modes: put it into low-power SLEEP mode, wake it up, or get the status of the MSCAN control registers.

When the message buffer is successfully opened for writing, it could be accessed by the *write* API statement to transmit a message with the corresponding Identifier. The MSCAN driver places the message data either directly into one of the three MSCAN transmission buffers, or into the transmission queue, when the QUEUED transmission mode is statically specified. The message is assigned to a local priority. The write message buffer opened in the priority-scheduled transmission type is assigned a local priority, defined to be the seven most significant bits of CAN Identifier. The lower CAN Identifier value, the higher the priority. The time-scheduled message buffers are assigned the lowest possible priority and are processed after any priority-scheduled message in the sequence of corresponding *write* statement appearance. If the transmission message buffer is operating in the asynchronous mode, the write statement returns immediately after putting a message either into the MSCAN transmission buffer or into the transmission queue. In the synchronous mode, the *write* statement does not return immediately after putting the message into the MSCAN transmission buffer, but waits until the successful message transmission is signaled by the send ISR.

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

To avoid transmission buffer overflow, the synchronous transmission mode is used. Otherwise, check the status of the corresponding message buffer before writing the next message data. The message data should be written into the buffer with the CANID_EMPTY status.

When the message buffer is successfully opened for read, it could be accessed by the *read* API statement to receive a message with the corresponding Identifier. Any read message buffer can have a data buffer, or a queue of data buffers, to store the messages received by the MSCAN module which passed the programmable acceptance filter. Any of these messages are processed by the MSCAN driver receive ISR. The receive ISR searches all read message buffers for a message with a matching CAN Identifier. If a match is found, the driver stores the received data in the data buffers queue for matching to the read message buffer. The application program can check the status of message buffers to find out if there are received messages waiting in the queue. The CANID_FULL message buffer status identifies that a new message with the matching Identifier has been received and is waiting in the data buffer or in the data buffer's queue. If a message with the matching Identifier has been received when all the assigned message data buffers are occupied, the earliest message from the queue is lost, (the head of the queue is cyclically shifted), and the message buffer status becomes CANID_OVERFLOW. The application program can read the data from the head of a buffer queue when the message buffer status is either CANID_FULL or CANID_OVERFLOW.

The developer may want to speed up the receive ISR to avoid looking through the message buffers to find the corresponding CAN Identifier. The application programmer can specify his own customized call back function, which will substitute the search of the matching read buffer. The call back function can return a pointer to a user-defined buffer where receive ISR will store the message received from CAN. The application can take the message data directly from the address returned by call back function. Therefore, there is no need to assign a data buffer to the read message buffer.

2.2 MSCAN Driver Static Configuration

The MSCAN driver can be statically configured to operate either in CAN2.0A or CAN2.0B addressing mode. In tCAN2.0A addressing mode, the driver operates with standard 11-bit message Identifiers and assigns four 16-bit acceptance filters. In CAN2.0B addressing mode, the driver operates with extended 29-bit message Identifiers and assigns two 32-bit acceptance filters.

The driver can be statically configured to operate either in QUEUED or UNQUEUED modes:

- For message transmission, the **unqueued** mode means that the allocated transmission message buffer does not store the message data. If it is available, the data is written directly to the MSCAN transmission buffer. When the **queued** transmission mode is set, each transmission message buffer is assigned a data buffer to store the message data and length. All the opened message buffers are stored in queue, either in prioritized or time-sequenced order.
- For message receiving in **queued** mode, every receiving message buffer is allocated a queue of a specified size. This queue stores the messages with the matching Identifier received from the bus before it is read by the application.

The default configuration of the driver is:

— CAN2.0A addressing mode
— 11-bit message Identifiers
— four 16-bit acceptance filters
— UNQUEUED transmission mode

For More Information On This Product,
Go to: www.freescale.com

ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

To change any of these features, see the corresponding macro definitions specified in file:

<Embedded SDK location>\src\dsp568xxevm\nos\bsp\mscan.h

To set QUEUED mode, specify:

```
#define CAN_QUEUED_TRANSMISSION
```

To set CAN2.0B addressing mode with 29-bit message Identifiers and two 32-bit acceptance filters, specify:

```
#define CAN20B
```

2.3 Application Static Configuration

The default configuration for MSCAN Driver applications is specified in the file:

<Embedded SDK location>\src\dsp568xxevm\nos\config\config.h

Any of these default features could be redefined to suit the needs of the particular application. This can be done by setting corresponding macro definitions in the file:
<Application location>\config\appconfig.h

Possible configurable features are described in the next sections.

2.3.1 CAN_MAX_RECEIVE_ID

Set the CAN_MAX_RECEIVE_ID value to specify the maximum possible number of open read buffers. This constant value is introduced to control memory consumption of the application.

The default value for CAN_MAX_RECEIVE_ID is seven; i.e., seven buffers can be opened for read, and messages with seven different CAN Identifiers can be received.

2.3.2 CAN_MAX_TRANSMIT_ID

Set the CAN_MAX_TRANSMIT_ID value to specify the maximum possible number of open write buffers. This constant value is introduced to control memory consumption of the application.

The default value for CAN_MAX_RECEIVE_ID is seven; i.e., seven buffers can be opened for write, and messages with seven different CAN Identifiers can be transmitted.

2.3.3 CAN_SPEED

Set the CAN_SPEED value to assign bit timing values for MSCAN Time Control Registers. Use one of the widely used CAN speed values listed in the file **<Embedded SDK location>\src\dsp568xxevm\nos\config\config.h** to set the most appropriate CBTR0 and CBTR1 values, or to specify custom bit timing values for:

— CAN_TIME_SEGMENT1
— CAN_TIME_SEGMENT2

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

— CAN_PRESCALER
— CAN_SAMPLING
— CAN_SYNCH_JUMP_WIDTH

Refer to the **CAN Specifications** and the **DSP56F80x User's Manual** for details of MSCAN register's description.

2.3.4 CAN_TIME_SEGMENT1

Set the CAN_TIME_SEGMENT1 value to directly specify the length of the Time Segment 1 in clock cycles. Refer to the **CAN Specifications** for details of the MSCAN time control register's description. When the CAN_SPEED value is specified, the CAN_TIME_SEGMENT1 value may not be set and all timing characteristics will be set automatically.

2.3.5 CAN_TIME_SEGMENT2

Set the CAN_TIME_SEGMENT2 value to directly specify the length of the Time Segment 2 in clock cycles. Refer to the **CAN Specifications** for details of the MSCAN time control register's description.When the CAN_SPEED value is specified, the CAN_TIME_SEGMENT2 value may not be set and all timing characteristics will be set automatically.

2.3.6 CAN_PRESCALER

Set CAN_PRESCALER to specify the Baud Rate Prescaler. Refer to **CAN Specifications** for details of the MSCAN time control register's description. When the CAN_SPEED value is specified, the CAN_PRESCALER value may not be set and all timing characteristics will be set automatically.

2.3.7 CAN_SAMPLING

Set CAN_SAMPLING to specify the number of samples of the serial bus to be taken per bit time. Value "0" means that one sample is taken per bit; value "1" means that three samples are taken. When the CAN_SPEED value is specified, the CAN_SAMPLING value may not be set and all timing characteristics will be set automatically.

2.3.8 CAN_SYNCH_JUMP_WIDTH

Set CAN_SYNCH_JUMP_WIDTH to define the maximum number of clock cycles a bit can be shortened or lengthened to achieve resynchronization to data transitions on the bus. Refer to the **CAN Specifications** for details of the MSCAN time control register's description. When the CAN_SYNCH_JUMP_WIDTH value is specified, the CAN_TIME_SEGMENT2 value may not be set and all timing characteristics will be set automatically.

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

2.3.9 CAN_STOP_IN_WAIT_MODE

The CAN_STOP_IN_WAIT_MODE can be set to either “0” or “1” and is used to indicate whether the low- power consumption for the MSCAN module is enabled in WAIT mode by disabling all the clocks at the bus interface. Value “1” means that the MSCAN module ceases to be clocked during WAIT mode, value “0” means that the MSCAN module is not affected during WAIT mode.

The default value for CAN_STOP_IN_WAIT_MODE is “0”; i.e., MSCAN does not stop in the WAIT mode.

2.3.10 CAN_LOOP_BACK

The CAN_LOOP_BACK can be set to either “0” or “1”. When set to “1”, it configures MSCAN to operate in the self-test mode. The bit stream output of the transmitter is fed back to the receiver internally. The MSCAN behaves as it does normally when transmitting and treats its own transmitted message as a message received from the remote node.

The default value for the CAN_LOOP_BACK is “0”; i.e., loopback self-test mode is disabled, and the transmitted messages are not received.

2.3.11 CAN_WAKE_UP_MODE

The CAN_WAKE_UP_MODE can be set to either “0” or “1” and is used to indicate whether the integrated low-pass filter is applied to protect the MSCAN module from a spurious wake-up. See the **DSP56F80x User’s Manual** for the MSCAN SLEEP mode description. Value “1” means that MSCAN wakes up the CPU only in the case of a continuous dominant pulse on the bus, value “0” means that MSCAN wakes up the CPU after any recessive to dominant edge on the CAN bus.

The default value for CAN_WAKE_UP_MODE is “0”; i.e., MSCAN is not protected from a spurious wake up.

2.3.12 CAN_CLOCK_SOURCE

The CAN_CLOCK_SOURCE defines the type of the MSCAN clock source. Value “0” means that the Crystal Oscillator Clock is used; value “1” means that the IP bus clock is used. See the **DSP56F80x User’s Manual** for MSCAN clock system description.

The default value for the CAN_CLOCK_SOURCE is “1”.

2.3.13 CAN_CUSTOM_FILTER_CODE

The CAN_CUSTOM_FILTER_CODE can be specified to define a custom acceptance filter code value. Note that the size of the acceptance code should be in the range of 11-bit for CAN2.0A addressing mode and in the range of 29-bit for CAN2.0B addressing mode. If specified, this value will be used instead of the automatically assigned value.

By default, the CAN_CUSTOM_FILTER_CODE value is not set; therefore, all the acceptance filters are automatically assigned while opening message buffers.

For More Information On This Product,
Go to: www.freescale.com
Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Note: Custom acceptance filters make sense when employed with the user-defined call back function.

2.3.14 CAN_CUSTOM_FILTER_MASK

The CAN_CUSTOM_FILTER_MASK can be specified to define a custom acceptance filter mask value. Note that the size of the acceptance mask should in the range of 11-bit for the CAN2.0A addressing mode and in the range of 29-bit for the CAN2.0B addressing mode. If specified, this value will be used instead of the automatically assigned value.

By default, the CAN_CUSTOM_FILTER_MASK value is not set; therefore, all the acceptance filters are automatically assigned while opening message buffers.

Note: If specified, acceptance code and acceptance mask must both be defined. The acceptance mask value without the acceptance code specified makes sense only if all the bits are masked. If only the acceptance code is specified, the acceptance mask will be treated as '0'; i.e., no bits are masked.

2.3.15 CAN_RECEIVE_ID_QUEUE_SIZE

The CAN_RECEIVE_ID_QUEUE_SIZE specifies the size of the message buffer receiving data queue. The messages with the matching Identifiers received from the CAN and successfully passed through the acceptance filter are placed into the message buffer data queue, from which the **read** statement gets message data. When the queue is full; i.e., the number of received but not read messages is equal to the queue size, the new message with the matching Identifier will overwrite the earliest message in the queue. There is no need to specify the queue size when the custom receive call back function is used.

By default, the CAN_RECEIVE_ID_QUEUE_SIZE is set to "1"; i.e., every message received but not read is overwritten in the buffer. If the raw call back function exists, CAN_RECEIVE_ID_QUEUE_SIZE will be ignored.

Notes:

- Specify CAN_QUEUED_TRANSMISSION mode to enable receiving queues support for a queue size greater than one.
- The CAN_RECEIVE_ID_QUEUE_SIZE is rounded up to 2 in power of N; i.e., 1, 2, 4, 8, 16, etc.

2.3.16 CAN_RAW_CALLBACK

The CAN_RAW_CALLBACK specifies the name of the call back function, defined within the application to customize the receive ISR behavior. The standard receive ISR looks through all the opened read buffers to find the one with the matching Identifier. To avoid this search, and therefore to speed up the ISR processing, the custom function can be used to return the pointer to the buffer, where it places the received data.

The call back function must be declared prior to the CAN_RAW_CALLBACK definition, must get the message Identifier parameter and return the pointer to a *can_sData* structure, which is specified in: **<Embedded SDK location>\src\dsp568xxevm\nos\include\can.h**

For More Information On This Product,
Go to: www.freescale.com

ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For example:

```
can_sData* CallBackFunction(UWord32 canid)
```

By default, the CAN_RAW_CALL_BACK is treated as not specified; i.e., standard data buffer search is conducted by receive ISR.

Note: The CAN_RECEIVE_ID_QUEUE_SIZE shall be set to zero or undefined; any non-zero CAN_RECEIVE_ID_QUEUE_SIZE value will be ignored.

2.4 Low-Power Modes

In applications where low current consumption is important, it may be necessary to shut down all or part of the micro-controller during periods when no processing is required. There are two levels of reduced power consumption: **wait** mode and **stop** mode. These modes are entered by executing the WAIT and STOP instructions, respectively. Normal processing is resumed when a reset or an interrupt occurs.

The **sleep** mode is a low-power mode which applies to the MSCAN module only and is independent of the MCU mode. In SLEEP mode, the MSCAN is shut down in a controlled manner. Transmission and reception of CAN messages is halted. However, the CANRX input pin remains active and if a transition is detected on the CAN bus, the MSCAN module will wake-up and function normally after 11 recessive bits have been detected. A CAN message which wakes up the MSCAN module is therefore not received or acknowledged, but the next message is received or acknowledged, unless the MCU was in STOP mode.

The MSCAN is requested to enter SLEEP mode by calling *ioctl* statement in the mode CAN_SET_SLEEP. The *ioctl* statement in the mode CAN_GET_STATUS should be used to verify that the MSCAN has entered SLEEP mode. The MSCAN is awakened from SLEEP mode either by detecting a transition on the CAN bus, by *write* statement, or by calling the *ioctl* statement in the CAN_SET_WAKEUP mode. If the MSCAN is awakened by a transition on the CAN bus, this will also wake up the MCU from either the WAIT or the STOP mode. The MSCAN may use a wake-up filter to limit the minimum transition period, which will wake up the MSCAN. To apply this filter, set CAN_WAKE_UP_MODE, found in file:

<Application location>\config\appconfig.h

In WAIT mode, the CPU and certain other peripheral modules are not clocked; i.e., no longer function. Some modules may be programmable to function or not function in WAIT mode. The MSCAN may be programmed to function or not function in WAIT mode by means of setting the CAN_STOP_IN_WAIT_MODE in the file:

<Application location>\config\appconfig.h

In both cases, the MSCAN may be put in SLEEP mode prior to entering WAIT mode. If the MSCAN is put into SLEEP mode prior to entering WAIT mode, then a transition on the CAN bus will also wake up the MCU from WAIT mode.

In STOP mode, the MCU oscillator is shut down, so no modules are clocked. This is the lowest power consumption mode. No CAN messages can be received during this time. If the MSCAN is put into SLEEP mode prior to entering STOP mode, a transition on the CAN bus will also wake up the MCU from STOP mode.

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

If the MSCAN is NOT in SLEEP mode, but the MSCAN clocks are stopped by entering STOP mode, or WAIT mode with CAN_STOP_IN_WAIT_MODE set, a CAN message transmission could be halted part way through, violating the CAN protocol. Also, the MSCAN module will not wake up when a transition occurs on the CAN bus, and the MSCAN module may contain garbage data when its clocks are restarted.

2.5 MSCAN Driver Files

The MSCAN driver files are provided in source code and are installed into DSP568xx Embedded SDK. After installation the MSCAN driver files are distributed as follows:

<Embedded SDK location>\src\dsp568xxevm\nos\bsp\mscan.c

This is the source file of the MSCAN driver. Do not edit this file.

<Embedded SDK location>\src\dsp568xxevm\nos\bsp\mscan.h

This is the header file of the MSCAN driver. Do not edit this file except for the static driver configuration settings: addressing mode (CAN2.0A vs. CAN2.0B) and transmission mode (queued vs. unqueued). To change the MSCAN Driver static configuration, set the appropriate #define in *mscan.h* and rebuild the *bsp.mcp* project.

<Embedded SDK location>\src\dsp568xxevm\nos\include\can.h

This is the application header file. It is included into an application source code to provide access to the MSCAN Driver interface structures, data types, and constants. For a detailed description of the application data types, see in **Section 2.7**.

<Embedded SDK location>\src\dsp568xxevm\nos\config\config.c

This is the SDK file, responsible for initialization of such SDK componentsas Input/Output, Memory Management, Timers Management, etc. See the **Embedded SDK Programmer's Guide** for details.

Note: This file will not be modified by the MSCAN driver installation. Therefore, the MSCAN driver initialization code must be inserted into this file manually. Find the piece of code bound by:

```
#if defined( INCLUDE_CAN )
...
#endif
```

and substitute it with the piece of code provided in the *readme.txt* file.

<Embedded SDK location>\src\dsp568xxevm\nos\config\config.h

This is the SDK file, responsible for configuration of SDK components. This file specifies whether the particular SDK component is built into the system, and sets default values for the application configuration features for these components. Features specified in the *config.h* file can be overwritten by definition in the application's *appconfig.h* file, located in:

<Application location>\config\appconfig.h

See the **Embedded SDK Programmer's Guide** for details.

For More Information On This Product,
Go to: www.freescale.com

ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Note: This file will not be modified by the MSCAN driver installation. Therefore, the MSCAN Driver initial configuration code must be inserted into this file manually. Find the piece of code bound by:

```
#ifdef INCLUDE_CAN
...
#endif
```

and substitute it with the piece of code provided in the *readme.txt* file.

<Embedded SDK location>\src\dsp568xxevm\nos\application\can

This folder contains the DSP part of the demo application utilizing the MSCAN Driver API functions. For a detailed description of the demo, see **Appendix A.5** .

<Embedded SDK location>\src\x86\win32\applications\can

This folder contains the PC part of the demo application utilizing the MSCAN Driver API functions. For a detailed description of the demo, see **Appendix A.5** .

2.6 Application Files

The main application source file to utilize the MSCAN Driver API resides in the <*Application location*> and includes the following files:

```
#include "port.h"
#include "arch.h"
#include "io.h"
#include "periph.h"
#include "fcntl.h"
#include "can.h"
```

The <*Application location*>*config* directory contains files *appconfig.c*, *appconfig.h*, and *linker.cmd*. See the **Embedded SDK Programmer's Guide** for details.

The *appconfig.h* file provides the mechanism to overwrite the default initial configuration settings, specified in the file:

<Embedded SDK location>\src\dsp568xxevm\nos\config\config.h

The *appconfig.h* file for an application utilizing the MSCAN driver should specify that MSCAN support is enabled:

```
#define INCLUDE_CAN
```

Any application configuration features described in **Section 2.3** can also be defined in the *appconfig.h* file to customize the particular application. For example:

```
#define CAN_SPEED         100000              /* specify CAN speed */
#define CAN_MAX_TRANSMIT_ID 2                 /* overwrite default number of
transmitting buffers*/
```


For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

2.7 Application Data Types

The data types to be used by the application programmer in the MSCAN driver API calls are specified in the file:

<Embedded SDK location>\src\dsp568xx\nos\include\can.h

A detailed description of each follows:

2.7.1 *can_sOpenParams*

```
/* structure type for opening a buffer */
typedef struct{
       UWord32 canID;
       can_eScheduleType scheduleType;
       can_eFormat messageFormat;
}can_sOpenParams;
```

A structure variable of *can_sOpenParams* type specifies the parameters of the new message buffer created by the *open* statement. The description of the structure fields types follows:

2.7.2 *can_eFormat*

```
/* types of char format */
typedef enum
{
       CAN_8BIT = 7,
       CAN_16BIT = 8
} can_eFormat;
```

The *can_eFormat* enumerator data type specifies possible values for the *messageFormat* field of the *can_sOpenParams* structure. It defines the type of data, which is to be sent or received from the buffer. When the data elements are 16-bit size, the CAN_16BIT value shall be used; each data element will occupy two data bytes, and only four data elements are sent in one CAN frame. When the data elements can fit to 8 bits, the CAN_8BIT format is used; each data element occupies one data byte of the CAN frame; i.e., eight data elements can be sent in one CAN frame.

2.7.3 *can_eScheduleType*

```
/* types of transmission schedule */
typedef enum
{
       CAN_TIME_SCHEDULE,
       CAN_PRIORITY_SCHEDULE
} can_eScheduleType;
```

The *can_eScheduleType* enumerator data type specifies possible values for *scheduleType* field of the *can_sOpenParams* structure. It defines the type of transmission schedule for messages transmitted from the opened buffer. The messages in CAN_PRIORITY_SCHEDULE are assigned a local priority taken as seven most significant bits of the message CAN Identifier. The lower the Identifier value, the higher the priority. Messages are transmitted, then placed into the queue in priority order. In the case of the

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

CAN_TIME_SCHEDULE schedule type, the messages of the corresponding buffer will be transmitted and placed into the queue in the order of the corresponding write statement appearance. The local priority of such messages will be considered to be lower than any priority-scheduled message.

Notes:

- While using the priority-scheduled transmission mode, only the seven most significant bits are used for priority arbitration; i.e., the messages with CAN Identifiers 0x0001 and 0x002 will have the same priority.
- The *messageFormat* field is not used for receiving message buffers.

2.7.4 *can_sData*

```
/* structure type for data exchange */
typedef struct
{
      UWord16 length;  /* length message */
      unsigned char data[8]; /* message data */
} can_sData;
```

A structure variable of a type *can_sData* is used to specify a custom buffer for received message data when call back function is defined. Custom call back function returns a pointer to a structure of *can_sData* type. When there is no CAN_RAW_CALLBACK defined, data buffers are allocated internally by the driver.

2.8 Driver Memory Requirements

The following memory requirements are applicable to the MSCAN Driver code. The measured data is provided on the standard manner for DSP56800 family architecture[1] in 16-bit words. In real application, this data can be less due to deadstrip of unused code.

2.8.1 MSCAN Driver Code

2.8.1.1 Unqueued Transmission Mode, 11-bit Standard Addressing Type:

- Code ROM: 1448
- Data ROM: 24
- RAM: 56

2.8.1.2 Unqueued Transmission Mode, 29-bit Extended Addressing Type:

- Code ROM: 1863
- Data ROM: 24
- RAM: 56

1. For example the array "*unsigned char buf[10];*" consumes 10 16-bit words or 20 bytes. However "*sizeof(buf)"* equals 10 for this architecture.

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

2.8.1.3 Queued Transmission Mode, 11-bit Standard Addressing Type:

- Code ROM: 1634
- Data ROM: 24
- RAM: 57

2.8.1.4 Queued Transmission Mode, 29-bit Extended Addressing Type:

- Code ROM: 2049
- Data ROM: 24
- RAM: 57

2.8.2 MSCAN Driver Simple Application Code

The minimal reasonable CAN application can consume the following[1]:

- Code ROM: 412
- Data ROM: 76
- RAM: 121

1. The data is given from testing results.

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Chapter 3
API Functional Description

3.1 Overview

This section describes the Application Programming Interface, (API), functions of the driver in detail. The MSCAN driver API functions are implemented within the Motorola Embedded SDK I/O API, unified for all SDK components.

3.1.1 Error Codes

The *CANerrno* external variable is set by the MSCAN if an error occurs. **Table 3-1** lists error codes.

Table 3-1. Error Codes

Enumeration	Value	Description
CAN_ERR_LOST	-1	The message is lost
CAN_ERR_SYNCH	-2	MSCAN module is not synchronized to the CAN bus
CAN_ERR_BUSOFF	-3	MSCAN module is in bus-off state
CAN_ERR_BUSY	1	All buffers are occupied
CAN_ERR_PARAMETER	2	Reserved for future use
CAN_ERR_REOPEN	3	MSCAN module is in reset state
CAN_ERR_NO_BUFFERS	4	No more free buffers for opening
CAN_ERR_CALL	5	API function incorrectly called

3.2 *open* API statement

3.2.1 Prototype

```
int open (const char * pName, int oFlags, can_sOpenParams* pParams)
```


For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

3.2.2 Arguments Description

The arguments displayed in **Table 3-2** are taken by the *open* statement.

Table 3-2. *open* Statement Parameters

Argument	Value	Description
pName	BSP_DEVICE_NAME_CAN_0	MSCAN device descriptor. Must be chosen from the list of possible SDK components descriptors, specified in ***<Embedded SDK location>\src\dsp568xx\nos\include\bsp.h***
oFlags	O_RDONLY	Open for reading
	O_WRONLY,	Open for writing in synchronous (blocking) mode
	O_WRONLY|O_NONBLOCK	Open for writing in asynchronous (non-blocking) mode
pParams		A pointer to a structure of *can_sOpenParams* type. See **Section 2.7.1** for details.

3.2.3 Return Values and Error Codes

The *open* statement returns the open handle to the message buffer. If an error is detected, “-1” is returned. Possible error codes are:

CAN_ERR_PARAMETER = Incorrect flags are set

CAN_ERR_REOPEN = The buffer with the same CAN Identifier is already opened (CAN Identifier uniquely specifies a read or write message buffer)

Note: Each particular CAN Identifier must be emitted by only one source. This is a CAN protocol limitation. The driver checks the accuracy of CAN Identifier assignment on a single microcontroller only. The user is responsible for guaranteeing the correct assignment of CAN Identifiers in the entire network

CAN_ERR_NO_BUFFERS = When the number of already-opened read message buffers is equal to CAN_MAX_RECEIVE_ID, no more buffers can be opened for reading. When the number of already-opened write message buffers is equal to CAN_MAX_TRANSMIT_ID, no more buffers can be opened for writing.

Note: Before using other API calls, check whether the *open* statement returns “-1” , or the CANerrno value.

If the device descriptor is other than BSP_DEVICE_NAME_CAN_0, and the open device is considered to be other than MSCAN, then “-1” is returned, and no error code is set.

3.2.4 Functionality Description

This function opens a particular CAN Identifier, either for reading (reception) or writing (transmission) and returns the handle to the opened message buffer. The function assigns appropriate features to the message buffer, as specified in the input structure of type *can_sOpenParams*, and assigns local priority to

For More Information On This Product,
Go to: www.freescale.com

ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

the messages for transmission. It also allocates data buffers for write buffers, when in queued transmission mode, and for read buffers in the absence of call back. The status of the newly-opened message buffer is CANID_EMPTY. Every opened read handle can later be accessed by the *read* statement, every opened write handle can be accessed by the *write* statement. Any open handle can be closed by a *close* statement and accessed by *ioctl* statement.

The *read* statement cannot be applied with the write open handle and the *write* statement cannot be applied with the read open handle.

To distinguish wanted CAN messages from unwanted messages, the driver updates MSCAN filters to receive wanted messages only.

While opening the message buffer for reading, the driver adjusts MSCAN acceptance filters:

- To receive the wanted (truly opened) messages properly
- To reduce the number of unwanted (other messages on CAN bus) messages to decrease the number of redundant driver receive interrupts

Because the number of MSCAN filters are limited, the driver uses the almost optimal algorithm to update filters for newly-opened CAN Identifiers. Each *open* statement for reading checks the already-specified filters and either assigns a new filter, or modifies the most appropriate closed filters, to receive a message with this CAN Identifier[1].

Note: Every *open* statement for the read message buffer is entering the soft reset state to assign the updated acceptance filters values. Therefore, some time should be reserved to get the CAN bus synchronized. When using the *write* statement immediately after such opening, check the return value and *CANerrno*. The CAN_ERR_SYNCH *CANErrno* value is possible.

3.2.5 Example

```
void main(void)
{
       int     rx1, tx1;
       can_sOpenParams Rx;
       can_sOpenParams Tx;

       Rx.canID = 1;
       Rx.messageFormat = CAN_16BIT;

       /* opened buffer for reading */
       rx1 = open(BSP_DEVICE_NAME_CAN_0, O_RDONLY, &Rx);

       Tx.canID = 0xFF;
       Tx.scheduleType = CAN_TIME_SCHEDULE;
       Tx.messageFormat = CAN_8BIT;

                /* opened buffer for writing */
       tx1 = open(BSP_DEVICE_NAME_CAN_0, O_WRONLY|O_NONBLOCK, &Tx );
}
```

1.More optimal techniques are significantly more complex and can not be implemented dynamically, due to memory restrictions.

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

3.3 *close* API statement

3.3.1 Prototype

```
int close(int handle)
```

3.3.2 Arguments Description

The arguments shown in **Table 3-3** are taken by the *close* statement.

Table 3-3. *close* Statement Parameters

Argument	Value	Description
Handle		The handle to the last previously opened message buffer.

3.3.3 Return Values and Error Codes

The *close* statement returns “0” when the buffer was successfully closed. When attempting to close the buffer which was not the last opened, either for read or write, the buffer will not close, and *close* will return “-1”.

3.3.4 Functionality Description

The *close* statement closes the last of the previously-opened read or write message buffers and adds it to the number of free buffers. The *close* statement returns “0”. The CAN Identifier assigned to the closed buffer can later be used while opening any other buffer.

3.4 *read* API statement

3.4.1 Prototype

```
int read(int Handle, void* pBuffer, int size)
```

3.4.2 Arguments Description

The arguments shown in **Table 3-4** are taken by the *read* statement.

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Table 3-4. *Read* Statement Parameters

Argument	Values	Description
Handle		The handle to the message buffer previously opened for reading
pBuffer		Pointer to a custom buffer in which to place the read data
size	[1 - 8] - for CAN_8BIT format [1 - 4] - for CAN_16BIT format	The maximum size of data to read into the buffer

3.4.3 Return Values and Error Codes

The *read* statement returns the number of successfully read data elements of the type specified by the *messageFormat* field of the *can_sOpenParams*. When the message format is CAN_8BIT, the read data size ranges from 1 to 8; when the message format is CAN_16BIT, the read data size ranges from 1 to 4.

If an error occurs, “-1” is returned, and a possible error code is:

CAN_ERR_CALL = The buffer is not open or is open for *write*

If no message with a matching Identifier has been received since the last reading from the buffer, the *read* statement returns “0”; no error code is set.

When the size of the read buffer is less than the received message, the unread data will be lost.

3.4.4 Functionality Description

The *read* statement is intended to receive a CAN message.

This function reads the data of a specified size from the previously-opened for reading message buffer to a custom buffer, defined in the application. The CAN message is received from the bus, and passed through the acceptance filter, then placed into the message buffer with the matching CAN Identifier. The status of this buffer becomes CANID_FULL. The message data from the full buffer can be read by the *read* statement.

Note: Check the status of the message buffer before reading by using the *ioctl* statement.

3.4.5 Example

```
void main(void)
{
      int rx1;
      can_sOpenParams Rx;

      char buf[64];
      UWord16 read_status;
      int bytes = 0;
```


For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

```
        Rx.canID = 1;
        Rx.messageFormat = CAN_8BIT;

        /* opened buffer for reading */
        rx1 = open(BSP_DEVICE_NAME_CAN_0, O_RDONLY, &Rx);

        for {;;}
        {
              /* check whether the new message is received */
                    read_status = ioctl(rx1, CANID_GET_STATUS, 0);
                    if (read_status == CANID_FULL)
                    /* read message data */
                    bytes += read( rx1, buf[bytes], 8);
        }
}
```

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

3.5 *write* API statement

3.5.1 Prototype

```
int write(int Handle, void* pBuffer, int size);
```

3.5.2 Arguments Description

The arguments in **Table 3-5** are taken by the *write* statement.

Table 3-5. *write* Statement Parameters

Argument	Value	Description
Handle		The handle to the message buffer previously opened for writing
pBuffer		Pointer to a custom buffer from which to take the written data
size	[1 - 8] - for CAN_8BIT format [1 - 4] - for CAN_16BIT format	The maximum size of data which can be written into the message buffer

3.5.3 Return Values and Error Codes

The *write* statement returns the number of successfully written data elements of the type specified by the *messageFormat* field of the *can_sOpenParams*. When the message format is CAN_8BIT, the size of written data ranges from 1 to 8; and when the message format is CAN_16BIT, the written data range is from 1 to 4. Transmitted data is truncated by these limits.

For More Information On This Product,
Go to: www.freescale.com

ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

If an error is detected, “-1” is returned; possible error codes:

- CAN_ERR_CALL
  - — the buffer is not open
  - — the buffer is open for read
  - — the buffer is not empty
- CAN_ERR_BUSOFF = MSCAN is in the Bus-Off state.

Note: If MSCAN goes to the Bus-Off state, all transmitting messages will be lost.

- CAN_ERR_SYNCH = MSCAN is not synchronized to the bus
- CAN_ERR_BUSY
  The meaning of this statement depends on the mode:
  - — Unqueued mode
    - – All three MSCAN transmission buffers are occupied
  - — Queued mode
    - – The local priority overflow occurred for time-scheduled messages;the condition of all three MSCAN transmission buffers empty must occur to reset the local priority
    - – The message buffer is FULL; the system cannot write to a full buffer
- CAN_ERR_LOST
  - — Synchronized mode = the time out expired, but the message has not been sent from one of the MSCAN transmission buffers

3.5.4 Functionality Description

The *write* statement is intended to transmit a CAN message.

This function writes data of specified size into the corresponding data buffer in the queued transmission mode, or directly into one of the three MSCAN transmission buffers in the unqueued mode. In the queued transmission mode, the *write* statement returns immediately after placing the message data to a buffer; in the unqueued mode, when synchronization is enabled (i.e., the buffer was opened without the O_NONBLOCK flag), the *write* statement waits until the successful transmission or until the corresponding buffer is signaled by the send ISR.

Notes:

- The presence or absence of the O_NONBLOCK flag is ignored in the queued transmission mode.
- Use the *ioctl* statement to check the status of the message buffer before writing. The MSCAN driver will report an error when trying to write to a full buffer.

3.5.5 Example

```
void main(void)
{
       char txbuf[]="MESSAGE";
       int    tx1;
       UWord16  write_status;

       can_sOpenParams Tx;

       Tx.canID = 0xFF;
       Tx.scheduleType = CAN_TIME_SCHEDULE;
```


For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

```
        Tx.messageFormat = CAN_8BIT;

        /* open message buffer for writing */
        tx1 = open(BSP_DEVICE_NAME_CAN_0, O_WRONLY|O_NONBLOCK, &Tx );

                wrtite_status = ioctl(tx1, CANID_GET_STATUS, 0);
        if (write_status == CANID_EMPTY)
              /* write to message buffer */
              write( tx1, txbuf, 7 ); /* time scheduled */

    }
```

3.6 *ioctl* API statement

3.6.1 Prototype

```
UWord16 ioctl(int Handle, UWord16 cmd, void * param, ... );
```

3.6.2 Arguments Description

The arguments in **Table 3-6** are taken by the *ioctl* statement.

Table 3-6. *ioctl* Statement Parameters

Argument	Value	Description
Handle		The handle to the message buffer previously opened for reading or writing
cmd	CAN_RESET	Re-initializes MSCAN and MSCAN driver
	CAN_SET_SLEEP,	Puts MSCAN into low-power SLEEP mode
	CAN_SET_WAKEUP	Wakes up MSCAN from the low-power SLEEP mode
	CAN_GET_STATUS	Gets the status of the MSCAN control registers
	CANID_GET_STATUS	Gets the status of the message buffer

3.6.3 Return Values and Error Codes

If an error is found, the *ioctl* statement returns “0”.

The error code CAN_ERR_PARAMETER will be set if an unknown *cmd* argument is detected.

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

3.6.4 Functionality Description

The *ioctl* statement is intended to control the MSCAN device. The following behaviors may occur, depending on the *cmd* parameter specified.

CAN_RESET

The *ioctl* statement reinitializes the MSCAN device as specified in the corresponding *appconfig.h* settings. The MSCAN control registers values are reset and all CAN Identifier handlers are cleared.

CAN_SET_SLEEP

The *ioctl* statement puts the MSCAN device into low-power SLEEP mode; for details, see **Section 2.4**.

CAN_SET_WAKEUP

The *ioctl* statement wakes up the MSCAN device from low-power SLEEP mode; see **Section 2.4** for details.

CAN_GET_STATUS

The *ioctl* statement writes and returns the 16-bit MSCAN status value, which should be treated as a combination of the flags shown in **Table 3-7**.

Table 3-7. MSCAN Status Flags

Status flag	Value	Description
CAN_SYNCHRONIZED	0x1000	MSCAN device is synchronized to a bus
CAN_SLEEP	0x400	MSCAN is in the internal SLEEP mode
CAN_WAKEUP	0x80	While in SLEEP mode, MSCAN detected activity on the bus and requested wake up
CAN_RX_WARN	0x40	MSCAN device is in the Receiver Warning state; i.e., the Receiver Error Counter exceeds 96
CAN_TX_WARN	0x20	MSCAN device is in the Transmitter Warning state; i.e., the Transmitter Error Counter exceeds 96
CAN_RX_ERR	0x10	MSCAN is in the Receiver Error passive state; i.e., the Receiver Error Counter exceeds 127
CAN_TX_ERR	0x08	MSCAN is in the Transmitter Error passive state; i.e., the Transmitter Error Counter exceeds 127
CAN_BUSOFF	0x04	MSCAN is in the Bus-Off state; i.e., the Transmit Error Counter exceeds 255
CAN_OVERRUN	0x02	MSCAN is in the Data Overrun condition
CAN_RX_FULL	0x01	MSCAN received a new message, but the receive buffer is full

The 16-bit MSCAN status value is combined from the less significant 8-bits of the CANCTL0 and CANTFLG registers. For details of the different statuses and registers' descriptions, see the **DSP56F80x User's Manual**.

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

The *ioctl* statement returns the 16-bit message buffer status value. **Table 3-8** shows the possible message buffer status values.

Table 3-8. Message Buffer Status Values

Status flag	Description
CANID_EMPTY	No message is stored in the message buffer: - do not read from the receiving buffer in this state - write to the transmitting buffer in this state
CANID_FULL	Message data is stored in the message buffer: - read from the receiving buffer in this state - do not write to the transmitting buffer in this state
CANID_OVERFLOW	Due to the queue overflow, the earliest message in the receiving queue is overwritten; this state is possible for the receiving buffers only

3.6.5 Example

```
void main(void)
{
       char txbuf[]="MESSAGE";
       int    tx1;
       UWord16  write_status, can_status;

       can_sOpenParams Tx;

       Tx.canID = 0xFF;
       Tx.scheduleType = CAN_TIME_SCHEDULE;
       Tx.messageFormat = CAN_8BIT;

       /* open message buffer for writing */
       tx1 = open(BSP_DEVICE_NAME_CAN_0, O_WRONLY|O_NONBLOCK, &Tx );

       can_status = ioctl(tx1, CAN_GET_STATUS, 0);

       if (can_status & CAN_SYNCHRONIZED)
       {
              wrtite_status = ioctl(tx1, CANID_GET_STATUS, 0);
              if (write_status == CANID_EMPTY)
                     /* write to message buffer */
                     write( tx1, txbuf, 7); /* time scheduled */
       }
}
```

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Chapter 4
License

4.1 Limited Use License Agreement

LIMITED USE LICENSE AGREEMENT

PLEASE READ THIS AGREEMENT CAREFULLY BEFORE USING THIS SOFTWARE. BY USING OR COPYING THE SOFTWARE, YOU AGREE TO THE TERMS OF THIS AGREEMENT.

The software in either source code form ("Source") or object code form ("Object") (cumulatively hereinafter "Software") is provided under a license agreement ("Agreement") as described herein. Any use of the Software including copying, modifying, or installing the Software so that it is usable by or accessible by a central processing unit constitutes acceptance of the terms of the Agreement by the person or persons making such use or, if employed, the employer thereof ("Licensee") and if employed, the person(s) making such use hereby warrants that they have the authority of their employer to enter this license agreement,. If Licensee does not agree with and accept the terms of this Agreement, Licensee must return or destroy any media containing the Software or materials related thereto, and destroy all copies of the Software.

The Software is licensed to Licensee by Motorola Incorporated ("Motorola") for use under the terms of this Agreement. Motorola retains ownership of the Software. Motorola grants only the rights specifically granted in this Agreement and grants no other rights. Title to the Software, all copies thereof and all rights therein, including all rights in any intellectual property including patents, copyrights, and trade secrets applicable thereto, shall remain vested in Motorola.

For the Source, Motorola grants Licensee a personal, non-exclusive, non-assignable, revocable, royalty-free right to use, copy, and make derivatives of the Source solely in a development system environment in order to produce object code solely for operating on a Motorola semiconductor device having a central processing unit ("Derivative Object").

For the Object and Derivative Object, Motorola grants Licensee a personal, non-exclusive, non-assignable, revocable, royalty-free right to copy, use, and distribute the Object and the Derivative Object solely for operating on a Motorola semiconductor device having a central processing unit.

Licensee agrees to: (a) not use, modify, or copy the Software except as expressly provided herein, (b) not distribute, disclose, transfer, sell, assign, rent, lease, or otherwise make available the Software, any derivatives thereof, or this license to a third party except as expressly provided herein, (c) not remove obliterate, or otherwise defeat any copyright, trademark, patent or proprietary notices, related to the Software (d) not in any form export, re-export, resell, ship or divert or cause to be exported, re-exported, resold, shipped, or diverted, directly or indirectly, the Software or a direct product thereof to any country which the United States government or any agency thereof at the time of export or re-export requires an export license or other government approval without first obtaining such license or approval.

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

THE SOFTWARE IS PROVIDED ON AN "AS IS" BASIS AND WITHOUT WARRANTY OF ANY KIND INCLUDING (WITHOUT LIMITATION) ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR ANY LIABILITY OR DAMAGES OF ANY KIND INCLUDING, WITHOUT LIMITATION, DIRECT OR INDIRECT OR INCIDENTAL OR CONSEQUENTIAL OR PUNITIVE DAMAGES OR LOST PROFITS OR LOSS OF USE ARISING FROM USE OF THE SOFTWARE OR THE PRODUCT REGARDLESS OF THE FORM OF ACTION OR THEORY OF LIABILITY (INCLUDING WITHOUT LIMITATION, ACTION IN CONTRACT, NEGLIGENCE, OR PRODUCT LIABILITY) EVEN IF MOTOROLA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. THIS DISCLAIMER OF WARRANTY EXTENDS TO LICENSEE OR USERS OF PRODUCTS AND IS IN LIEU OF ALL WARRANTIES WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE.

Motorola does not represent or warrant that the Software is free of infringement of any third party patents, copyrights, trade secrets, or other intellectual property rights or that Motorola has the right to grant the licenses contained herein. Motorola does not represent or warrant that the Software is free of defect, or that it meets any particular requirements or need of the Licensee, or that it conforms to any documentation, or that it meets any standards.

Motorola shall not be responsible to maintain the Software, provide upgrades to the Software, or provide any field service of the Software. Motorola reserves the right to make changes to the Software without further notice to Licensee.

The Software is not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Software could create a situation where personal injury or death may occur. Should Licensee purchase or use the Software for any such unintended or unauthorized application, Licensee shall indemnify and hold Motorola and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Motorola was negligent regarding the design or manufacture of the Software.

The term of this Agreement is for as long as Licensee uses the Software for its intended purpose and is not in default of any provisions of this Agreement. Motorola may terminate this Agreement if Licensee is in default of any of the terms and conditions of this Agreement.

This Agreement shall be governed by and construed in accordance with the laws of the State of Arizona and can only be modified in a writing signed by both parties. Licensee agrees to jurisdiction and venue in the State of Arizona.

By using, modifying, installing, compiling, or copying the Software, Licensee acknowledges that this Agreement has been read and understood and agrees to be bound by its terms and conditions. Licensee agrees that this Agreement is the complete and exclusive statement of the agreement between Licensee and Motorola and supersedes any earlier proposal or prior arrangement, whether oral or written, and any other communications relative to the subject matter of this Agreement.

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Appendix A
Demo Application

A.1 CAN Test Application

The test application MSCAN loopback mode checks the operation of the MSCAN device. This test application is located in the file:

<Embedded SDK location>\src\dsp5680Xevm\nos\bsp\test\mscan

The test application is based on standard SDK test API. If application is executed correctly, the string “Test Passed” will appear on the console window.

A.2 CAN Bus Installation

Two or more boards can be connected by CAN bus. The simplest CAN bus is two wires terminated by 124 ohm resistors, as shown in **Figure A-1**. EVM board contains CAN terminator resistor, thus corresponded jumper may be used to circuit this board resistor.

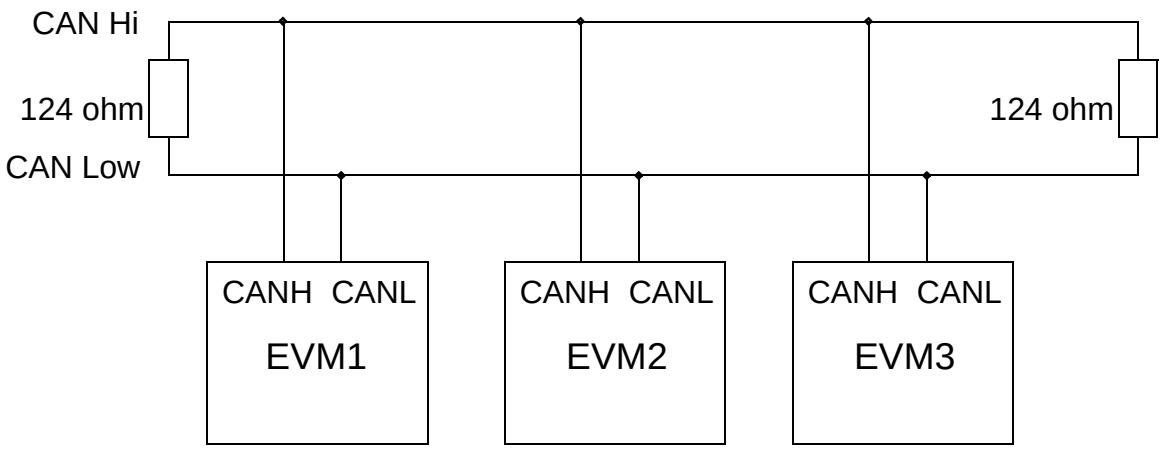

Figure A-1. CAN Bus

The CANH and CANL pins of the EVM board should be connected with the corresponding BUS wires; see **Table A-1**.

For More Information On This Product,
Go to: www.freescale.com

Table A-1. Pin Descriptions

EVM	Connector	Jumper	CAN Hi	CAN Low	Comments
DSP56803 alpha	J3	-	Pin #4	Pin #3	
DSP56805 alpha	J26	-	Pin #4	Pin #3	
DSP56803	J3 and/or J13	JG10	Pin #4	Pin #3	
DSP56805	J26 and/or J32	JG17	Pin #4	Pin #3	
DSP56807	J24	JG7	Pin #4	Pin #3	

Notes:

- The Alpha version of both the DSP56805 and DSP56803 EVM contains a hardware bug. To correct it, introduce the pull-up resistor between 3V and the MSCAN_TX pin.
- The External CLK settings of the Alpha version of both the DSP56805 and DSP56803 EVM do not work dependably. Using the IP Bus CLK is recommended.

A.3 Demo Overview

The MSCAN Driver demo consists of two parts:

- DSP56800 CAN Driver Application
- PC Monitor Application

Both parts of the demo are located in the files:

<Embedded SDK location>\src\dsp5680xevm\nos\applications\can

<Embedded SDK location>\src\x86\win32\applications\can

Follow these steps to launch the demo:

- Use the CAN bus to connect the EVMs
- Connect the EVM and the PC COM port by serial cable
  - Any PC serial port can be used to connect the EVM and the PC
- Download and run the DSP CAN driver application
- Start the PC Monitor demo

A.4 DSP5680x Demo Description

A simple program transmits and receives data via the CAN bus and communicates with the PC via serial port. The application should be compiled, downloaded to the DSP5680x Evaluation Module and run. The file *config\appconfig.h* can be edited by the user to change the CAN speed or other static configuration parameters.

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

A.5 PC Demo Description

The PC demo is a Win32 application developed in Microsoft Visual C++ 6.0. The user runs the *can.exe* file to launch the PC CAN demo application. This demo application is delivered in source code form and implemented on standard Win32 API statements. The user can easily build a demo application because it requires no complicated libraries.

With this application, the user can oversee CAN status, monitor CAN bus activity and control the states of leds located on the DSP5680x Evaluation Module.

The first dialog asks the user to choose the appropriate PC COM port to connect with the DSP5680x Evaluation Module.

Once the serial port is selected, the main application window is displayed; see **Figure A-2**.

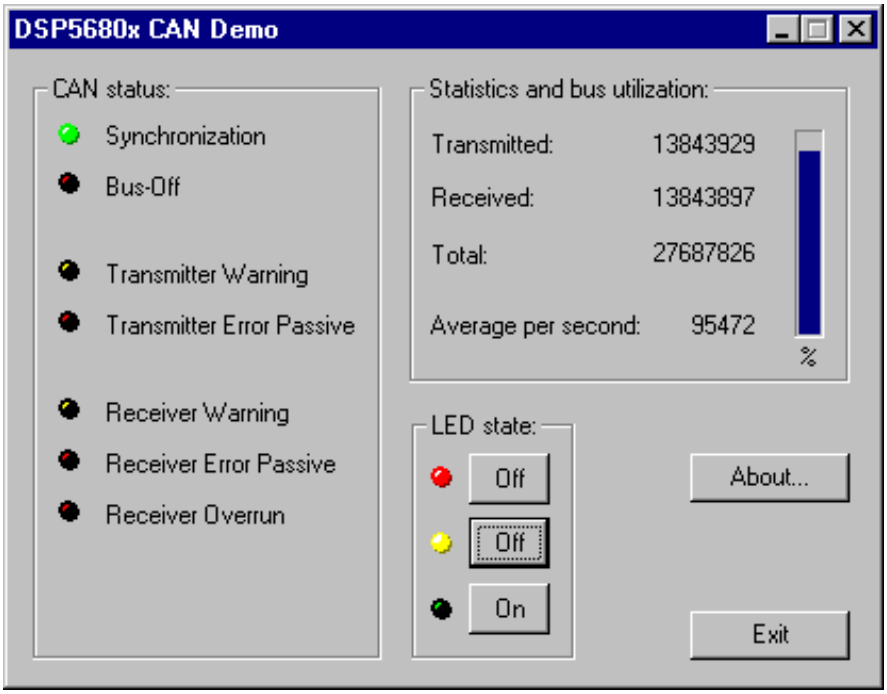

Figure A-2. Demo Application Main Dialog Window.

The CAN status panel on the left side of the window shows the current CAN state; the left side lamps correspond to particular bits of CAN status word.

In the upper right corner, the Statistics and Bus utilization panel shows CAN activity statistics, including the number of bytes transmitted and received and the total and average speed in bytes per second.

In the LED state panel are three lamps which show the state of LEDs located on the DSP5680x Evaluation Module. The LED state can be toggled by clicking the button to right to the lamp. A new LED state will be distributed for all DSP5680x Evaluation Modules connected by CAN bus while running the demo application.

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Appendix B
DSP56800/MSCAN Hardware Notes

B.1 Allowed Time Segments Settings

The Information Processing Time **CAN Specifications** of DSP56800/MSCAN should be greater than or equal to three Time Quantas when the prescaler value is one. If the user does not apply pre-defined driver CAN speeds, correct bit time settings are the user's responsibility. The parameters shown in **Table B-1** affect the CAN speed assignment.

Table B-1. DSP56800/MSCAN Related Parameters to Assign CAN Speed Manually

Hardware Name	MSCAN Driver Name	Used Alias	Notes
EXTAL_CLK	CAN_CLOCK_SOURCE	CLK	IP BUS or External CLK
Prescaler Value	CAN_PRESCALER	PV	
Time Segment 1	CAN_TIME_SEGMENT1	TS1	PROP _SEG and PHASE_SEG1 of **CAN Specifications**
Time Segment 2	CAN_TIME_SEGMENT2	TS2	PHASE_SEG1 of **CAN Specifications**
Synchronization Jump Width	CAN_SYNCH_JUMP_WIDTH	SJW	

Table B-2 gives an overview of the Allowed Time segment settings for parameter values related to CAN Speed.

For More Information On This Product,
Go to: www.freescale.com

Table B-2. Allowed DSP56800 CAN Speed Related Parameters

CLK	PV	TS1	TS2	SJW
= 0 (Ext)	> 1	5 <= TS1 <= 10	= 2	1 <= SJW <= 2
= 0 (Ext)	> 1	4 <= TS1 <= 11	= 3	1 <= SJW <= 3
= 0 (Ext)	> 1	5 <= TS1<= 12	= 4	1 <= SJW <= 4
= 0 (Ext)	> 1	6 <= TS1 <= 13	= 5	1 <= SJW <= 4
= 0 (Ext)	> 1	7 <= TS1 <= 14	= 6	1 <= SJW <= 4
= 0 (Ext)	> 1	8 <= TS1 <= 15	= 7	1 <= SJW <= 4
= 0 (Ext)	> 1	9 <= TS1 <= 16	= 8	1 <= SJW <= 4
= 1 (IP BUS)	= 1	4 <= TS1 <= 11	= 3	1 <= SJW <= 3
= 1 (IP BUS)	> 1	5 <= TS1 <= 10	= 2	1 <= SJW <= 2
= 1 (IP BUS)	Any	4 <= TS1 <= 11	= 3	1 <= SJW <= 3
= 1 (IP BUS)	Any	5 <= TS1 <= 12	= 4	1 <= SJW <= 4
= 1 (IP BUS)	Any	6 <= TS1 <= 13	= 5	1 <= SJW <= 4
= 1 (IP BUS)	Any	7 <= TS1 <= 14	= 6	1 <= SJW <= 4
= 1 (IP BUS)	Any	8 <= TS1 <= 15	= 7	1 <= SJW <= 4
= 1 (IP BUS)	Any	9 <= TS1 <= 16	= 8	1 <= SJW <= 4

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Index

A

acceptance filters 2-5, 3-3
API xi, 1-1
Application Program Interface
    API xi, 1-1
arbitration field 1-2

C

call back function 2-2, 2-6
CAN xi, 1-1
CAN ID xi
CAN Identifier
    CAN ID xi
CAN_16BIT 2-10
CAN_8BIT 2-10
CAN_ERR_BUSOFF 3-7
CAN_ERR_BUSY 3-7
CAN_ERR_CALL 3-5, 3-7
CAN_ERR_LOST 3-7
CAN_ERR_NO_BUFFERS 3-2
CAN_ERR_PARAMETER 3-2, 3-8
CAN_ERR_REOPEN 3-2
CAN_ERR_SYNCH 3-7
CAN_GET_STATUS 3-9
CAN_PRIORITY_SCHEDULE 2-10
CAN_RESET 3-9
CAN_SET_SLEEP 2-7, 3-9
CAN_SET_WAKEUP 2-7, 3-9
CAN_STOP_IN_WAIT_MODE 2-7
CAN_TIME_SCHEDULE 2-11
CANID_EMPTY 3-10
CANID_FULL 3-10
CANID_GET_STATUS 3-10
CANID_OVERFLOW 3-10
close 2-1, 3-4
Controller Area Network
    CAN xi, 1-1

D

Data Frame 1-2
Data Length Code 1-2
    DLC xi
Digital Signal Processor
    DSP xi
DLC xi
DSP xi

E

error codes 3-1
Error Frame 1-2

I

IDE xi
Identifier Extension
    IDE xi
Interrupt Service Routine
    ISR xi
ioctl 2-1, 3-8
ISR xi

M

MCU xi
memory requirements 2-11
MicroController Unit
    MCU xi
Motorola Scalable Controller Area Network
    MSCAN xi, 1-1
MSCAN xi, 1-1
MSCAN background receive buffer 1-4
MSCAN foreground receive buffer 1-4
MSCAN status values 3-9
MSCAN transmit buffers 1-4

O

open 2-1, 3-2
overrun condition 1-5

P

priority-scheduled transmission 2-1, 2-10

Q

queued mode 2-2

R

RAM xi
Random Access Memory
    RAM xi
read 2-2, 3-4
Read Only Memory
    ROM xi
Remote Frame 1-2
Remote Transmission Request
    RTR xi

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Remote Transmission Request Frame 1-2
ROM xi
RTR xi

S

SDK xi, 1-1
SLEEP mode 2-7
sleep mode 2-7
Software Development Kit
    SDK xi, 1-1
SRR xi
stop mode 2-7
Substitute Remote Request
    SRR xi
synchronous transmission 2-2

T

time-scheduled transmission 2-1

U

unqueued mode 2-2

W

wait mode 2-7
write 2-1, 3-6

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

For More Information On This Product,
Go to: www.freescale.com

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Freescale Semiconductor, Inc.
ARCHIVED BY FREESCALE SEMICONDUCTOR, INC. 2005

Motorola reserves the right to make changes without further notice to any products herein. Motorola makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Motorola assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. “Typical” parameters which may be provided in Motorola data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including “Typicals” must be validated for each customer application by customer’s technical experts. Motorola does not convey any license under its patent rights nor the rights of others. Motorola products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Motorola product could create a situation where personal injury or death may occur. Should Buyer purchase or use Motorola products for any such unintended or unauthorized application, Buyer shall indemnify and hold Motorola and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Motorola was negligent regarding the design or manufacture of the part. Motorola and the Stylized M Logo are registered trademarks of Motorola, Inc. Motorola, Inc. is an Equal Opportunity/Affirmative Action Employer.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. © Motorola, Inc. 2002.

How to reach us:
USA/EUROPE/Locations Not Listed: Motorola Literature Distribution; P.O. Box 5405, Denver, Colorado 80217. 1–303–675–2140 or 1–800–441–2447

JAPAN: Motorola Japan Ltd.; SPS, Technical Information Center, 3–20–1, Minami–Azabu. Minato–ku, Tokyo 106–8573 Japan. 81–3–3440–3569

ASIA/PACIFIC: Motorola Semiconductors H.K. Ltd.; Silicon Harbour Centre, 2 Dai King Street, Tai Po Industrial Estate, Tai Po, N.T., Hong Kong. 852–26668334

Technical Information Center: 1–800–521–6274

HOME PAGE: http://www.motorola.com/semiconductors/

MOTOROLA

For More Information On This Product,
Go to: www.freescale.com

SDK116/D